

STEERING WHEEL KIT



P/N 2892002

BEFORE YOU BEGIN


Before beginning assembly, inspect the kit and its component(s) to be sure all parts and tools are accounted for and not damaged. If missing parts or parts are damaged, please contact your Selling Dealer for assistance.

If your accessory was purchased online, please contact POLARIS customer service at **1-800-POLARIS** (US & Canada only).

APPLICATION

Verify accessory fitment at www.polaris.com.

KIT CONTENTS

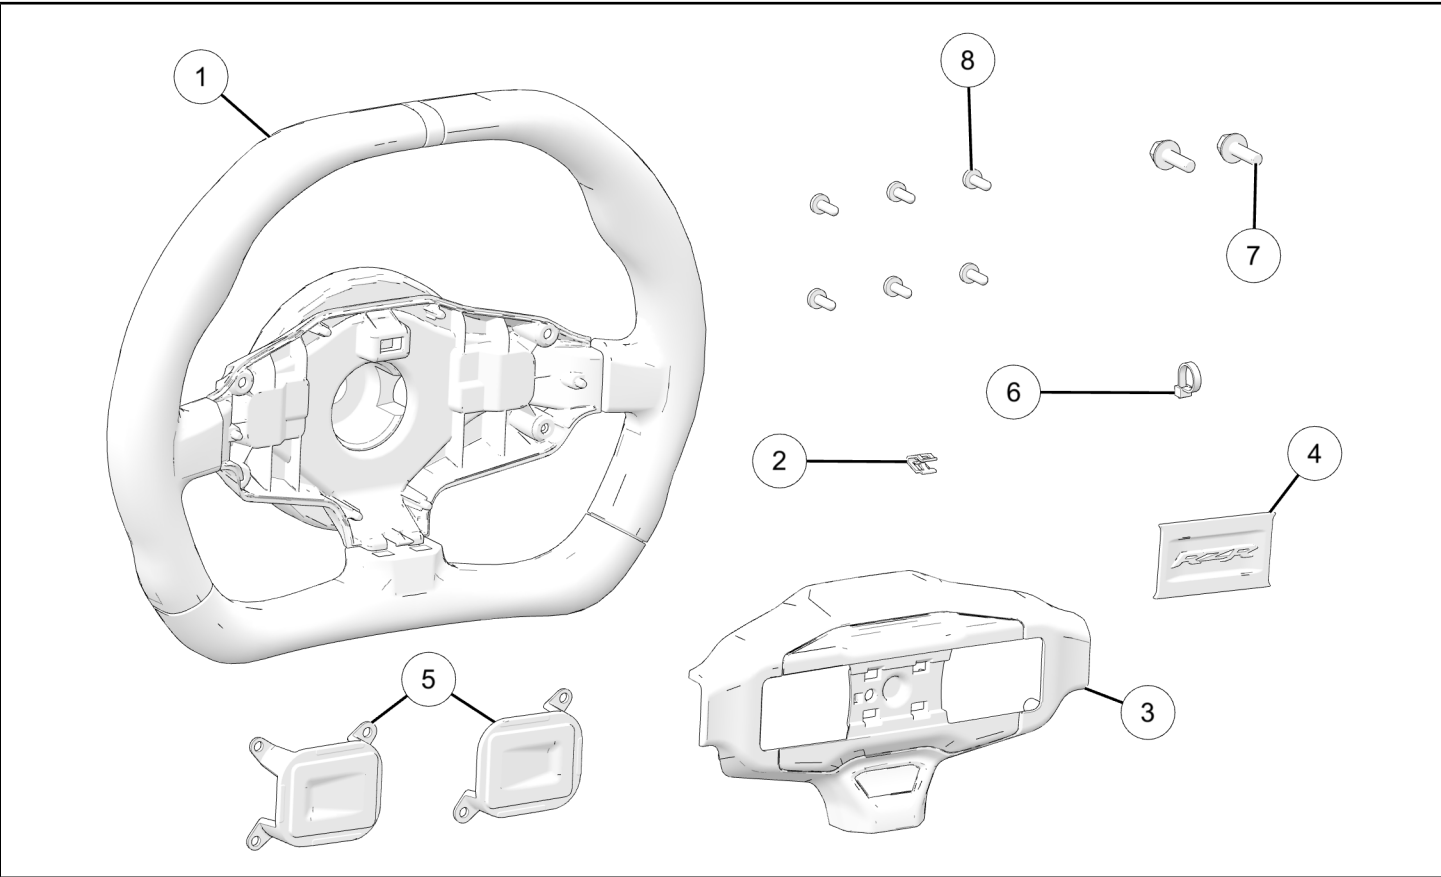

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Assembly, Steering Wheel	1830492
2	1	Clip	5456313
3	1	Cover, Steering Wheel	5467549-070
4	1	Badge, Steering Wheel	5467551
5	2	Cap, Close-Off	5467863
6	1	Cable Tie	7080138

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
7	2	Screw, Hex Flange, M6 x 1.0 x 20 mm	7518613
8	6	Screw, Hi Lo	7519091

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Hex Bit, Metric
- Socket Set, Torx® Bit
- Steering Wheel Puller Tool
- Torque Wrench

IMPORTANT

Your Steering Wheel Kit is exclusively designed for your vehicle. Please read the installation instructions completely before beginning. Installation is simpler if the vehicle is clean and free of debris. For your safety, and to make sure an acceptable installation, do all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

STEERING WHEEL REMOVAL

1. Remove steering wheel cover.

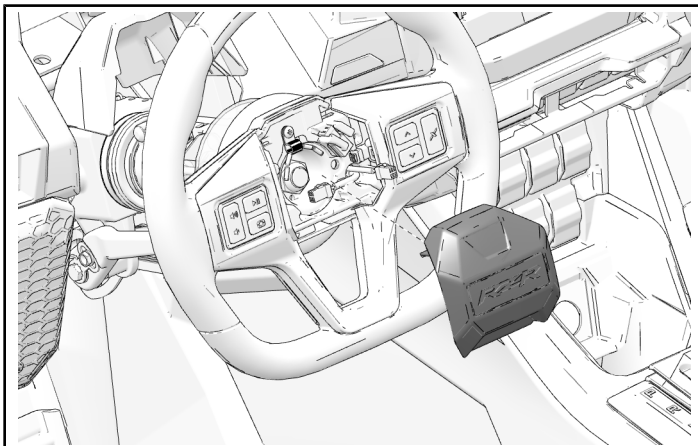


2. Remove steering wheel nut.

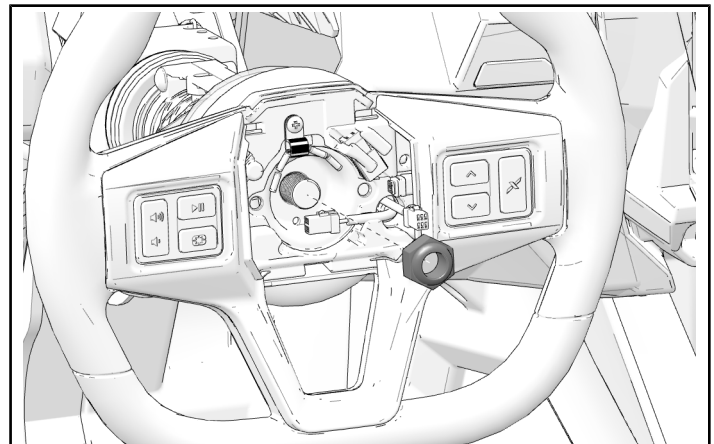

3. Disconnect steering wheel connections and remove steering wheel assembly using steering wheel puller tool.

IMPORTANT


Mark steering wheel orientation on steering wheel column shaft prior to removing steering wheel.

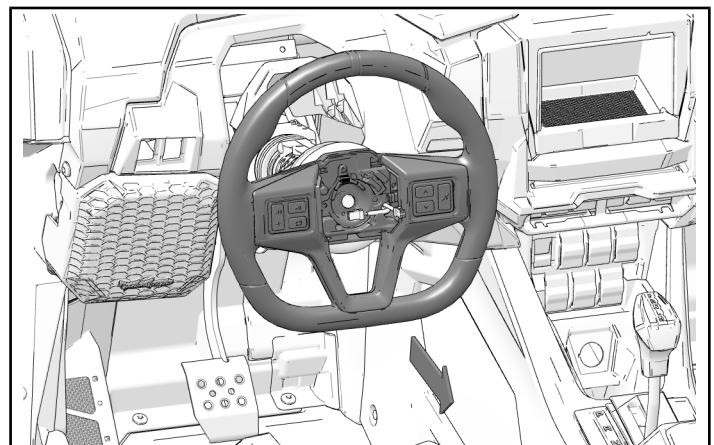

4. Remove four screws to remove steering wheel mount.

NOTICE


Steering wheel mount harness has been hidden for clarity.

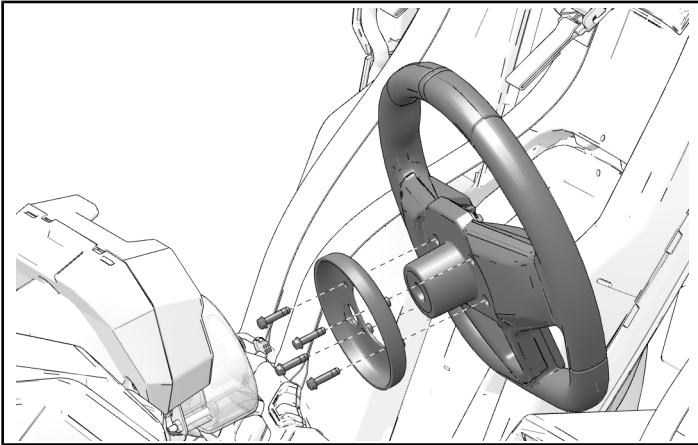

2. Install two close-off caps ⑤ to inner side of steering wheel cover ③ using two screws ⑧ in locations shown. Tighten screws until fully seated.


NOTICE

If using a vehicle with Dynamix, install button panels from stock wheel instead of close-off caps.

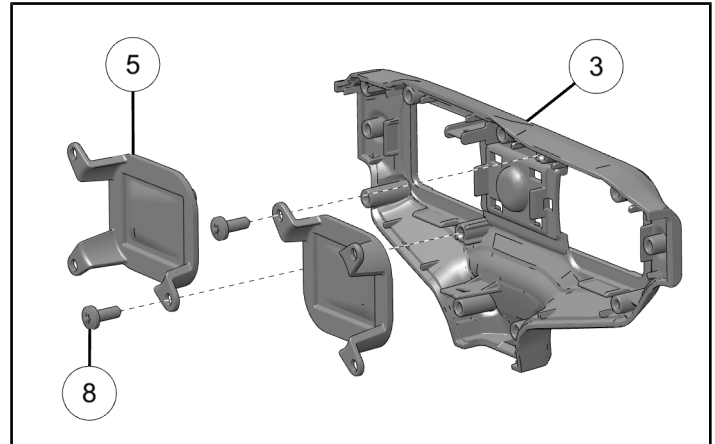


ACCESSORY INSTALLATION

1. Install clip ② to steering wheel assembly ① in location shown.

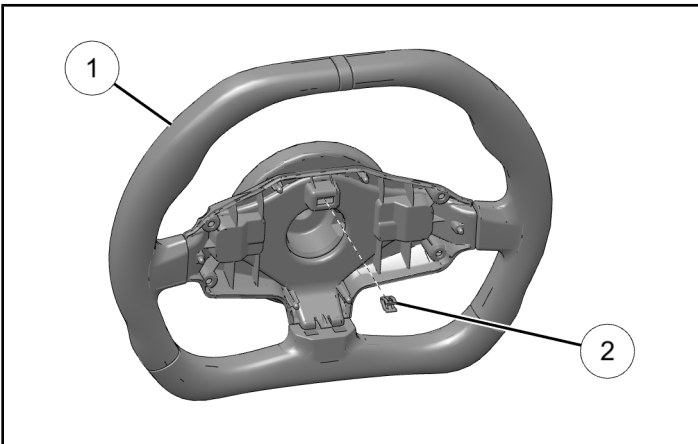

3. Install badge ④ to steering wheel cover assembly.

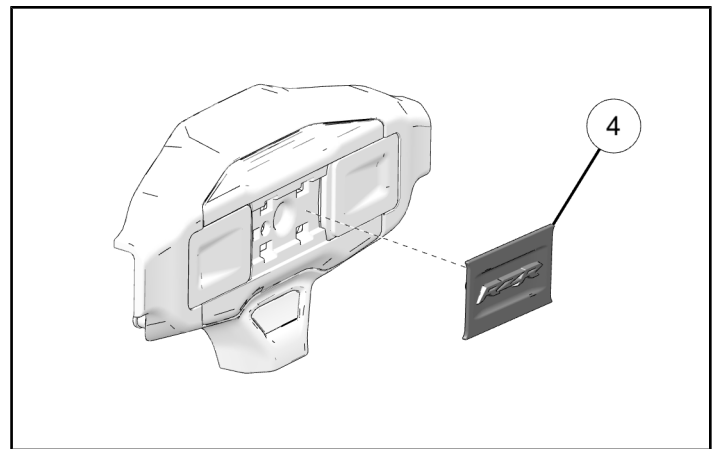


4. Install steering wheel assembly ① to steering wheel mount using two screws ⑦. Torque screws to specification.

NOTICE

Steering wheel mount harness has been hidden for clarity.

TORQUE

Screws ⑦:
88 in-lbs (10 N·m)

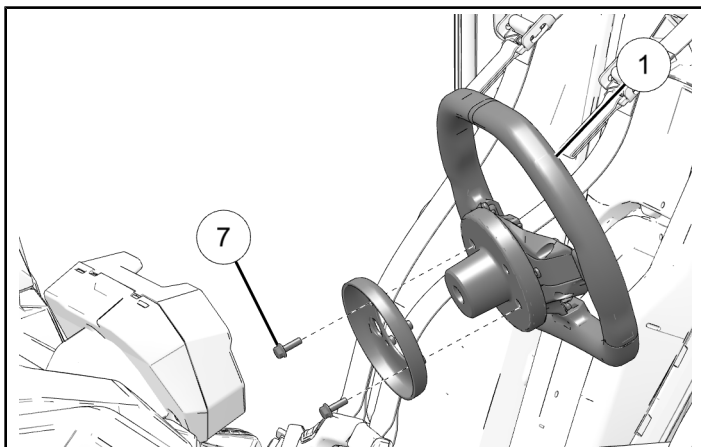


5. Install steering wheel assembly ① to steering wheel column using kept nut. Torque nut to specification.

IMPORTANT

Make sure steering wheel aligns with previously made mark on steering wheel column.

TORQUE

Nut:
66 ft-lbs (90 N·m)

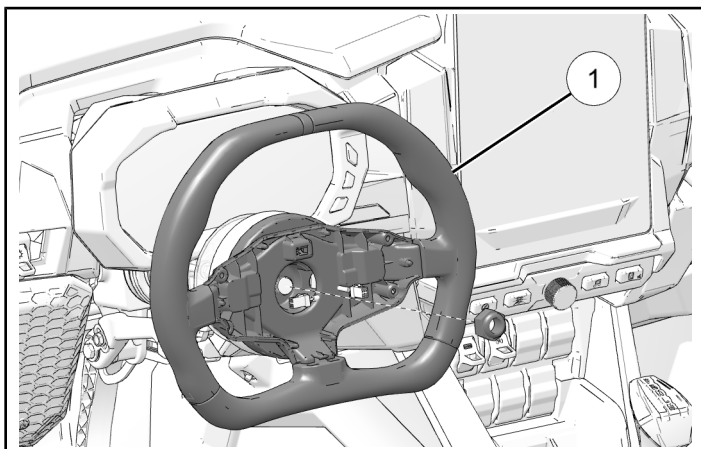

6. Connect steering wheel harnesses and install steering wheel cover assembly to steering wheel assembly using four screws ⑧. Torque screws to specification.

NOTICE

Parts of vehicle have been hidden for clarity.

TORQUE

Screws ⑧:
26 in-lbs (3 N·m)

